

T2 Repair SOP


Item No.	Disassembly Procedure		Issue Date	5-Jun-26	Page 7
			Tools & Equipment		
	Repair Tools		Pry piece, SIM eject pin, tweezers, gloves, screwdriver, tin scraper, finger cots, anti-static wrist strap		
1	Remove SIM tray, disconnect screen & screen FPC connector		Anti-static gloves, finger cots, anti-static wrist strap, pry piece, SIM eject pin, tweezers		
2	Unplug all FPC connectors on mainboard, remove mainboard screws and take out mainboard		Anti-static gloves, finger cots, anti-static wrist strap, tweezers, screwdriver		
3	Dismantle SIM socket, speakers, USB assembly and camera fixing bracket		Anti-static gloves, finger cots, anti-static wrist strap, tweezers, screwdriver		
4	Remove rear main camera, rear sub-camera and dismantle battery		Anti-static gloves, finger cots, anti-static wrist strap, tweezers, screwdriver		
5	Parts Diagram				
Prepared by		Reviewed by	Approved by	Rev.	Revision Description
Liao				A/0	Initial Release

T2Repair Tools



Disassembly Tools: Pry piece, tin scraper, screwdriver, tweezers

1) Remove SIM tray, disconnect screen & screen FPC connector

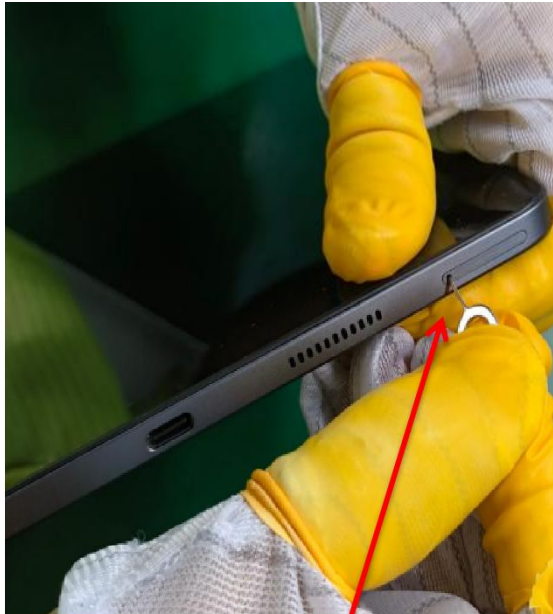

Eject the SIM tray with a SIM eject pin.




Separate the screen with a pry piece.




Disconnect the screen FPC connector with tweezers.


2) Unplug all FPC connectors on mainboard, remove mainboard screws and take out mainboard

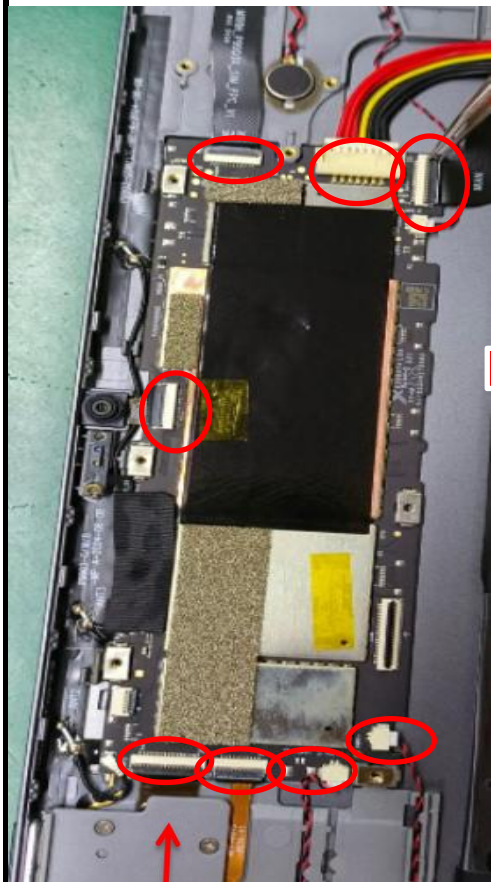

Disconnect all FPC connectors.

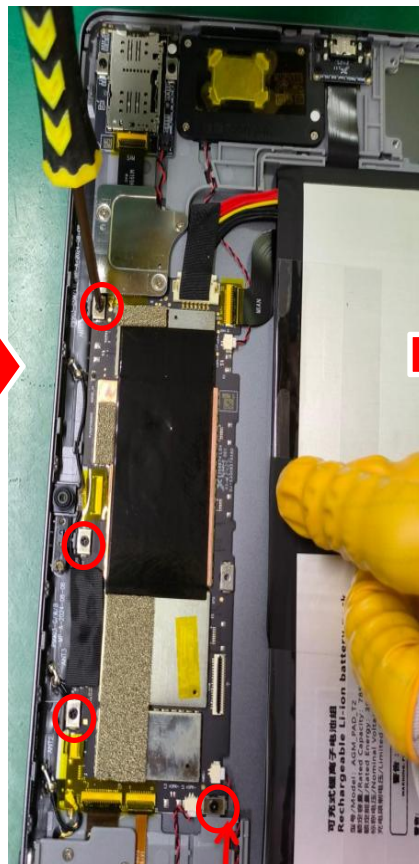


Remove mainboard screws with a screwdriver.

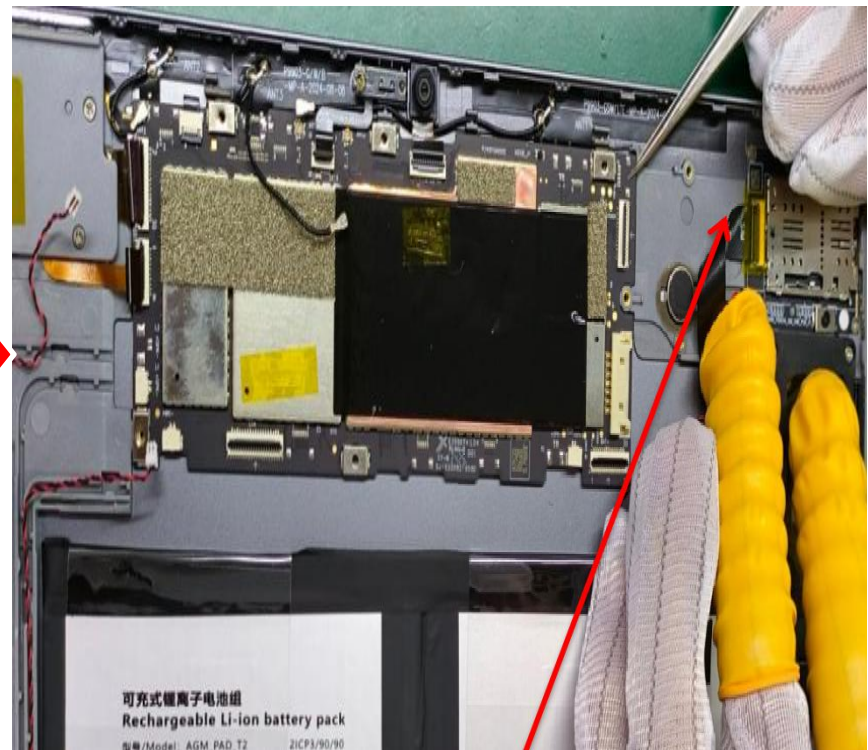

Take out the mainboard with tweezers.

3) Dismantle SIM socket, speakers, USB assembly and camera fixing bracket

Remove screws of SIM socket and speakers with a screwdriver.

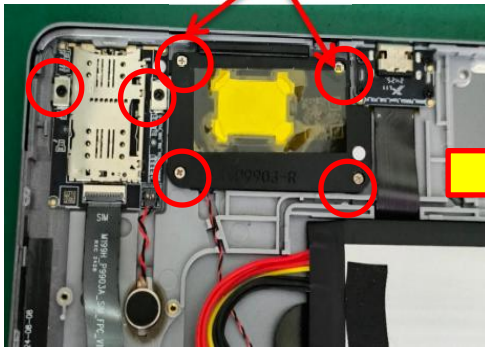

Remove the SIM socket with




Remove the right speaker with tweezers.




Remove the USB Assembly with tweezers.




Remove screws of camera fixing bracket and left speaker with a

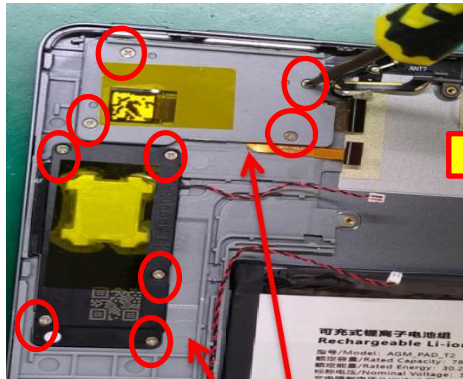

Remove the camera fixing bracket with

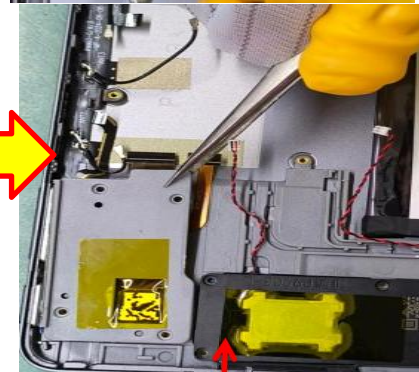


Remove the left speaker with tweezers.

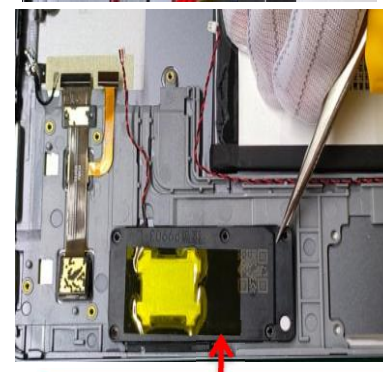

4) Remove rear main camera, rear sub-camera and dismantle battery



Remove the rear camera with tweezers.

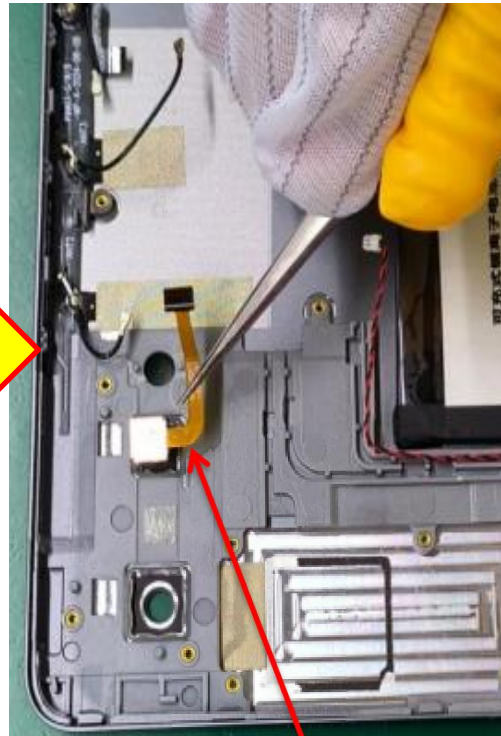

Take out the rear sub-camera with tweezers.



Lift up the battery with a tin scraper.

5)Parts Diagram

